

Ignitor Electrode Adjustment

1. Remove ignitor and change AA battery.



2. Remove four screws around emitter grid.



3. Remove emitter grid



3. Adjust electrode so that it is about 1/4" from pilot shield. A small spark should be seen when pressing red ignitor button.

