Kindle Heater Allison + Bella

Commercial Patio Heater Instructions



Your guide to elevating mood and atmosphere in ways you've never imagined.



Reinventing the patio heater

IMPORTANT! READ PRIOR TO ASSEMBLY

WARNING! This heater produces carbon monoxide gas and improper installation or indoor use can result in injury or death.

Before use, consult and adhere to the separate instructions provided by the manufacturer of the heater for proper installation, ignition, and operation.

During windy situations, REMOVE the Kindle shade and shelter the heater away from wind gusts.

To provide added protection against wind gusts, it is highly recommended to keep the propane tank inside the heater base to provide extra ballast for stability. The use of the optional floor clamps is also recommended.

Do not use your heater if there are any tears or rips in the Firewall lining of your Kindle shade. Care should be taken in transport, storage, and assembly of your Kindle to avoid such damage to the Firewall.

Due to protective oils that are used during the manufacturing process, some smoke will rise from the heater during the first 30 minutes of initial use.


When storing your Kindle avoid excess moisture and debris. Be sure to clean prior to first use after being stored.


It is recommended that you have the Kindle heater professionally serviced at least once a year or more often in adverse conditions (such as heavy commercial use, operation in extreme environments, beachside, etc.).

Heaters are for use with propane gas (LPG) only.


This manual is for Kindle assembly only. For heater installation, operation and maintenance instructions refer to the separate Sunglo instructions included in the heater box.

I. Firmly attach the three large L-brackets to the weighted base using a bolt, secondary nut and lock washer.

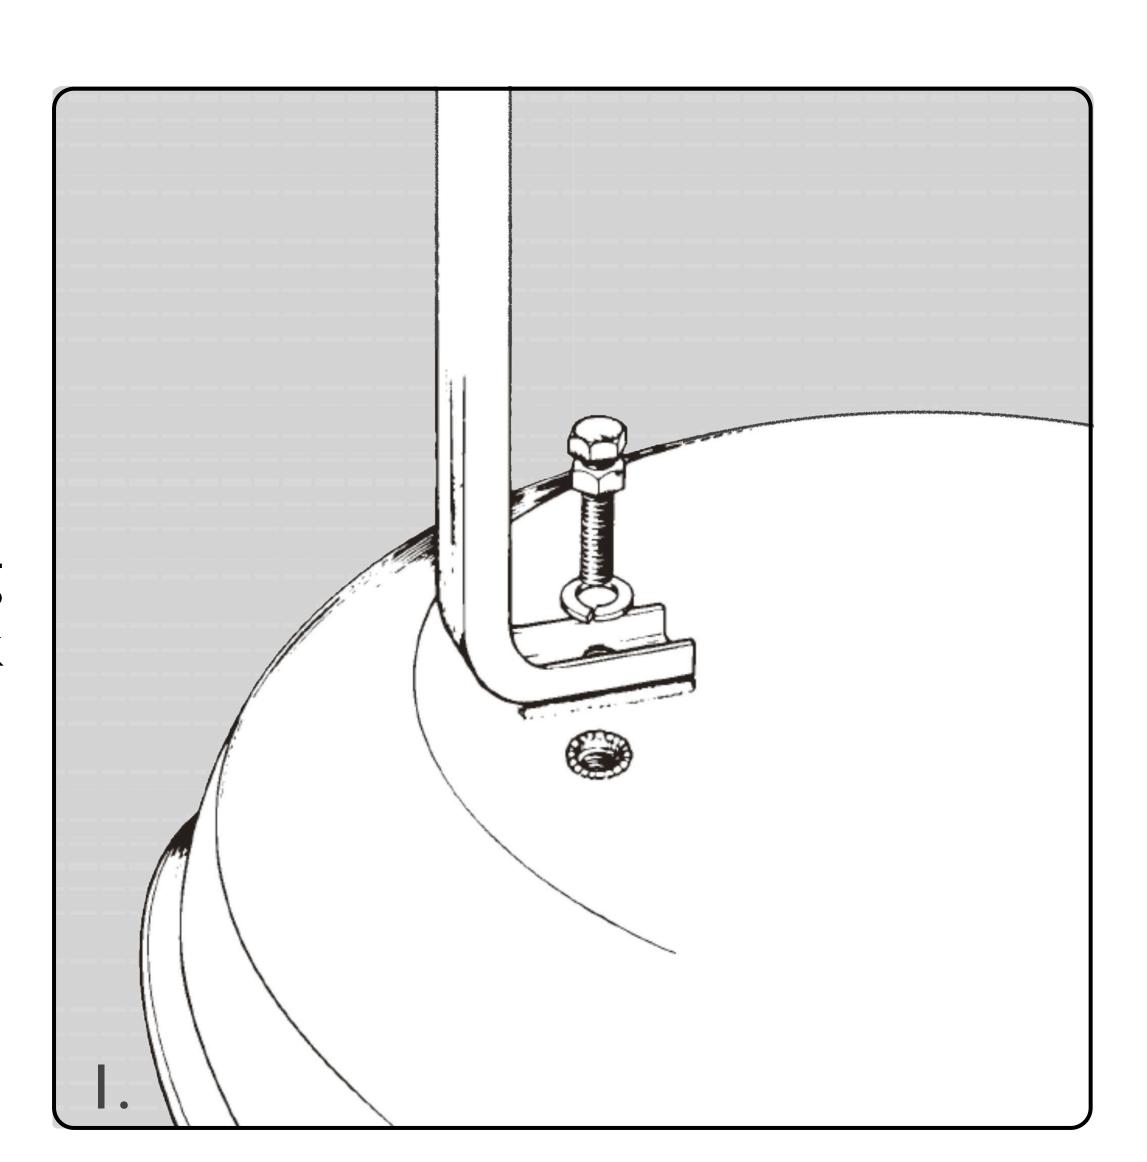

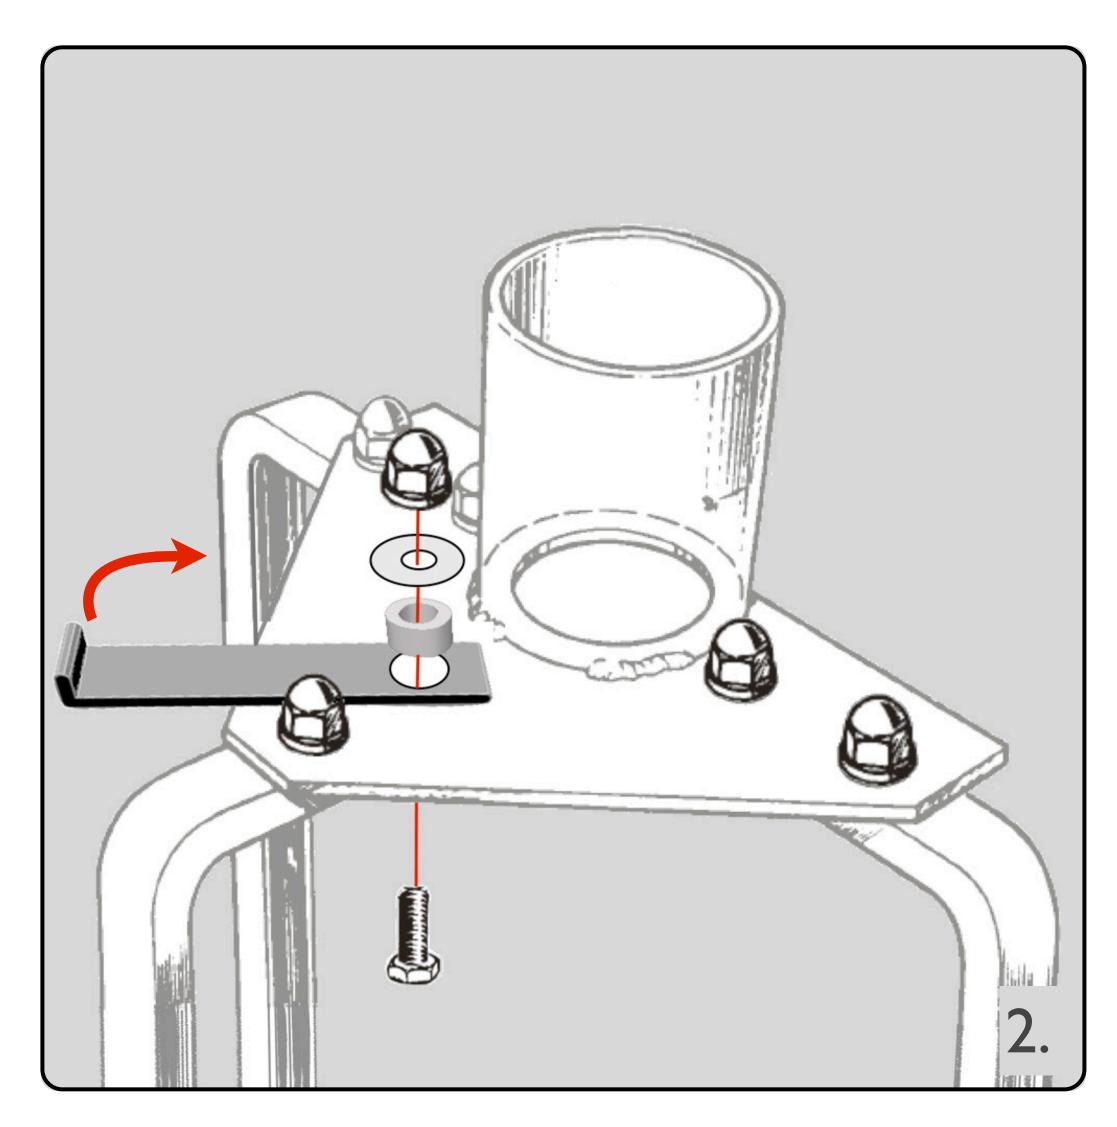



2. Attach the socket plate to the top of the L-brackets using the acorn nuts, bolts and lock washers. On one of the inside bolts, attach the propane cover support hook. The support hook uses a nylon bushing and a flat washer and will be able to swivel and support the propane cover when changing the propane tank.

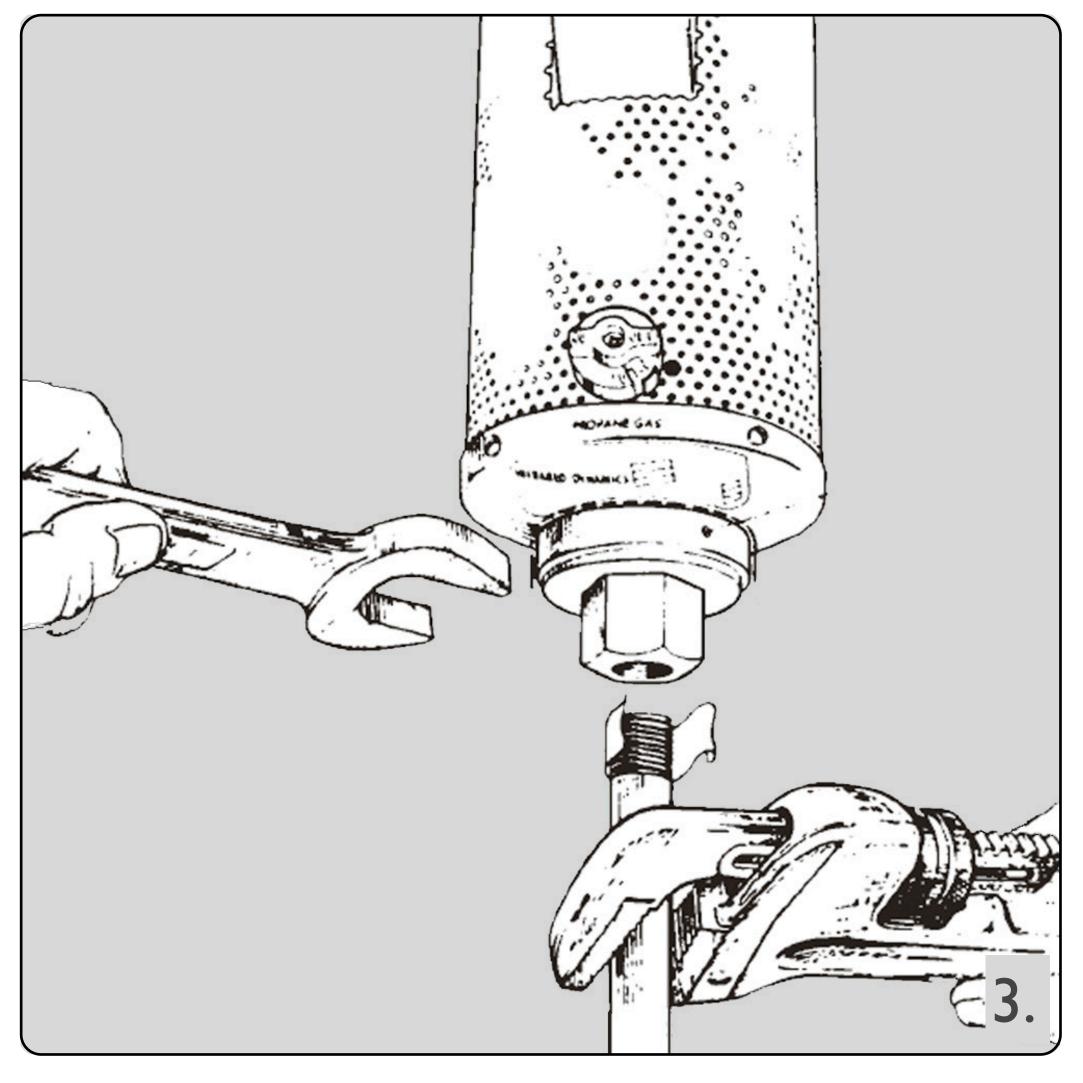

3. Using two wrenches, firmly attach the end of the gas pipe that has the teflon tape to the heater head.


4. Slide the black post over the gas pipe and secure to the heater head with the four screws that are included in the gas pipe packaging.

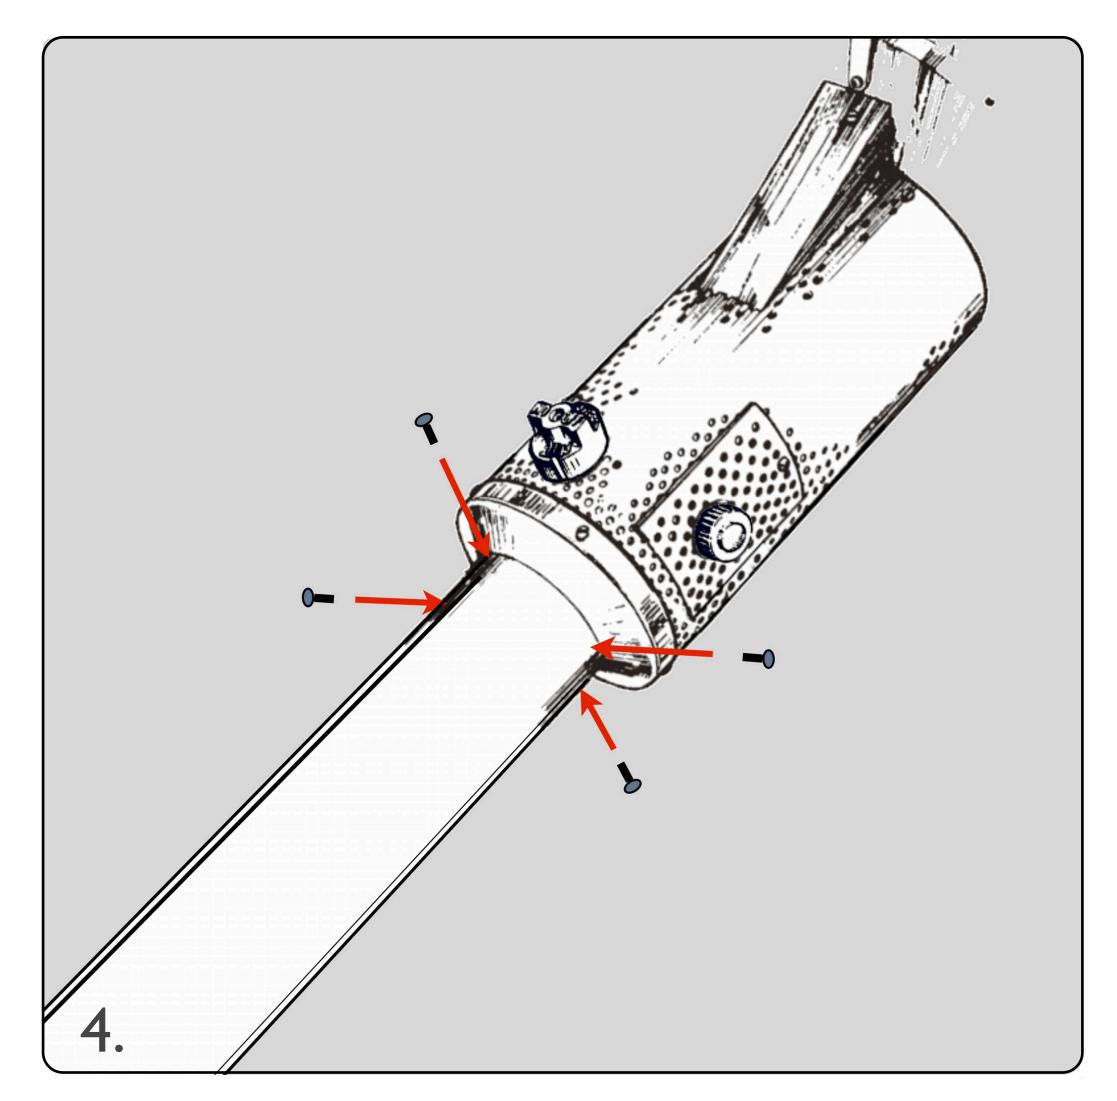


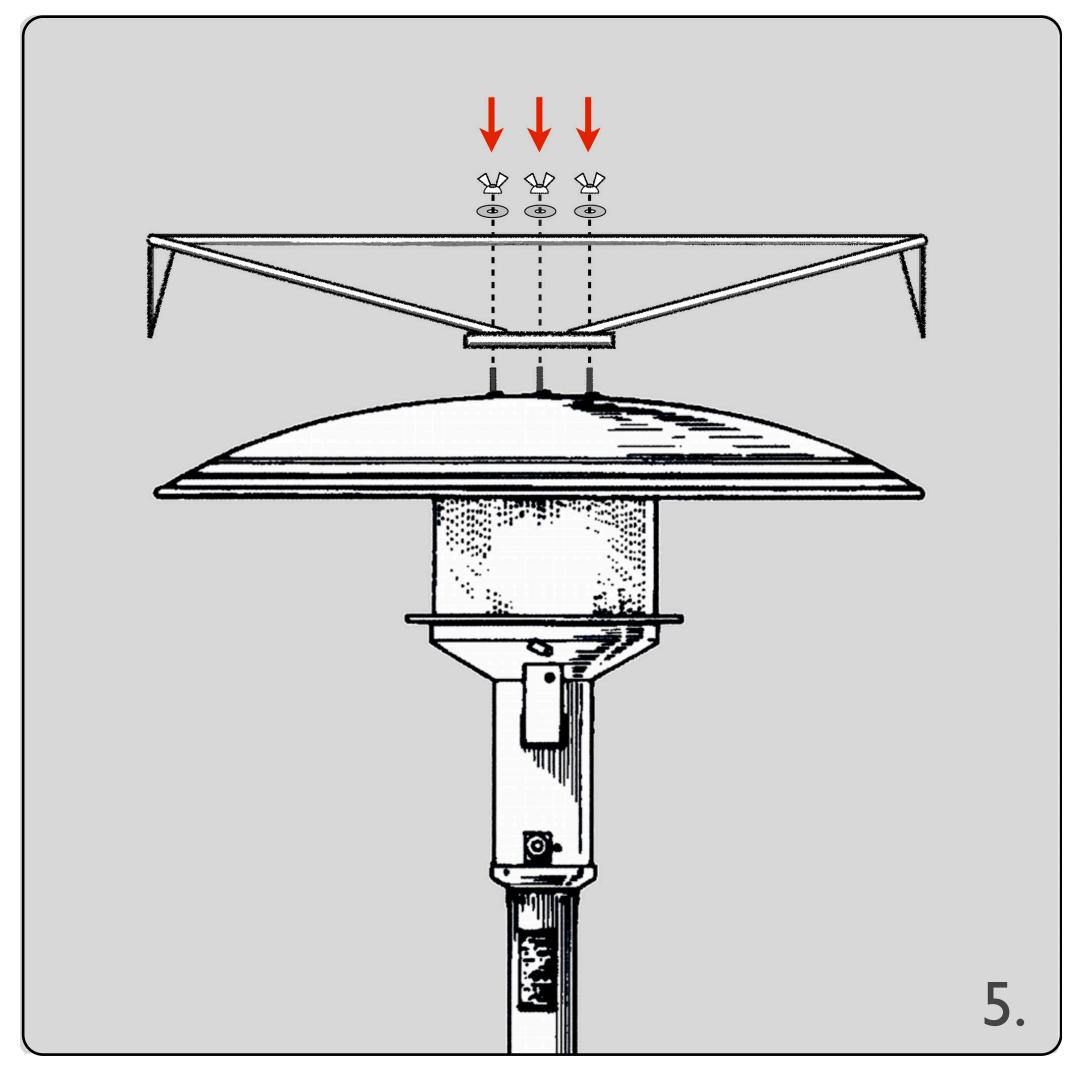

5. Attach the reflector and shade bracket to the bolts on top of the heater head with wing nuts and washers.


6. Place the heater head upside down. Slide the trim ring (or optional cocktail table) and Kindle neck over the post as far as possible, until resting snuggly against the base of the heater head.

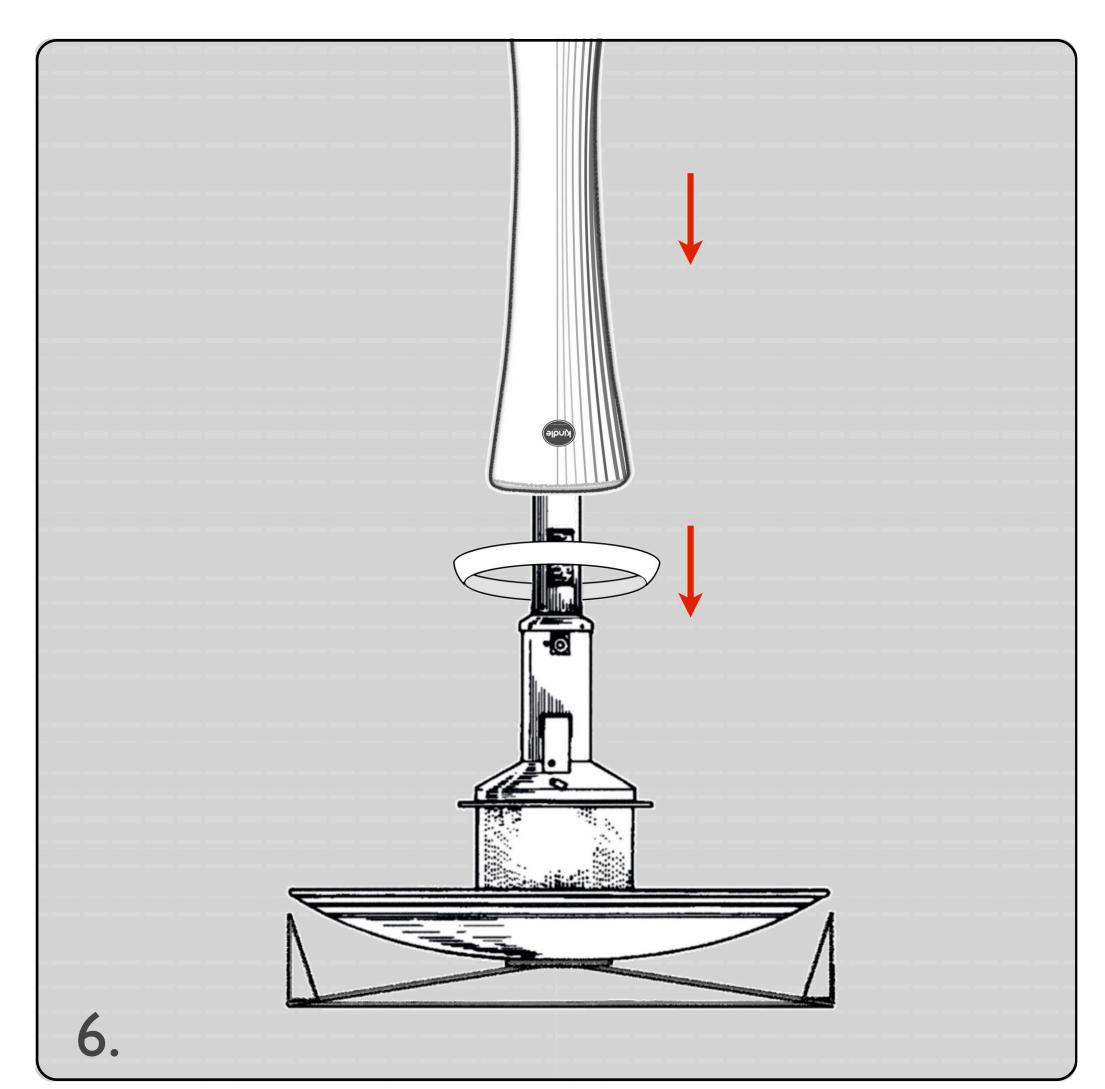


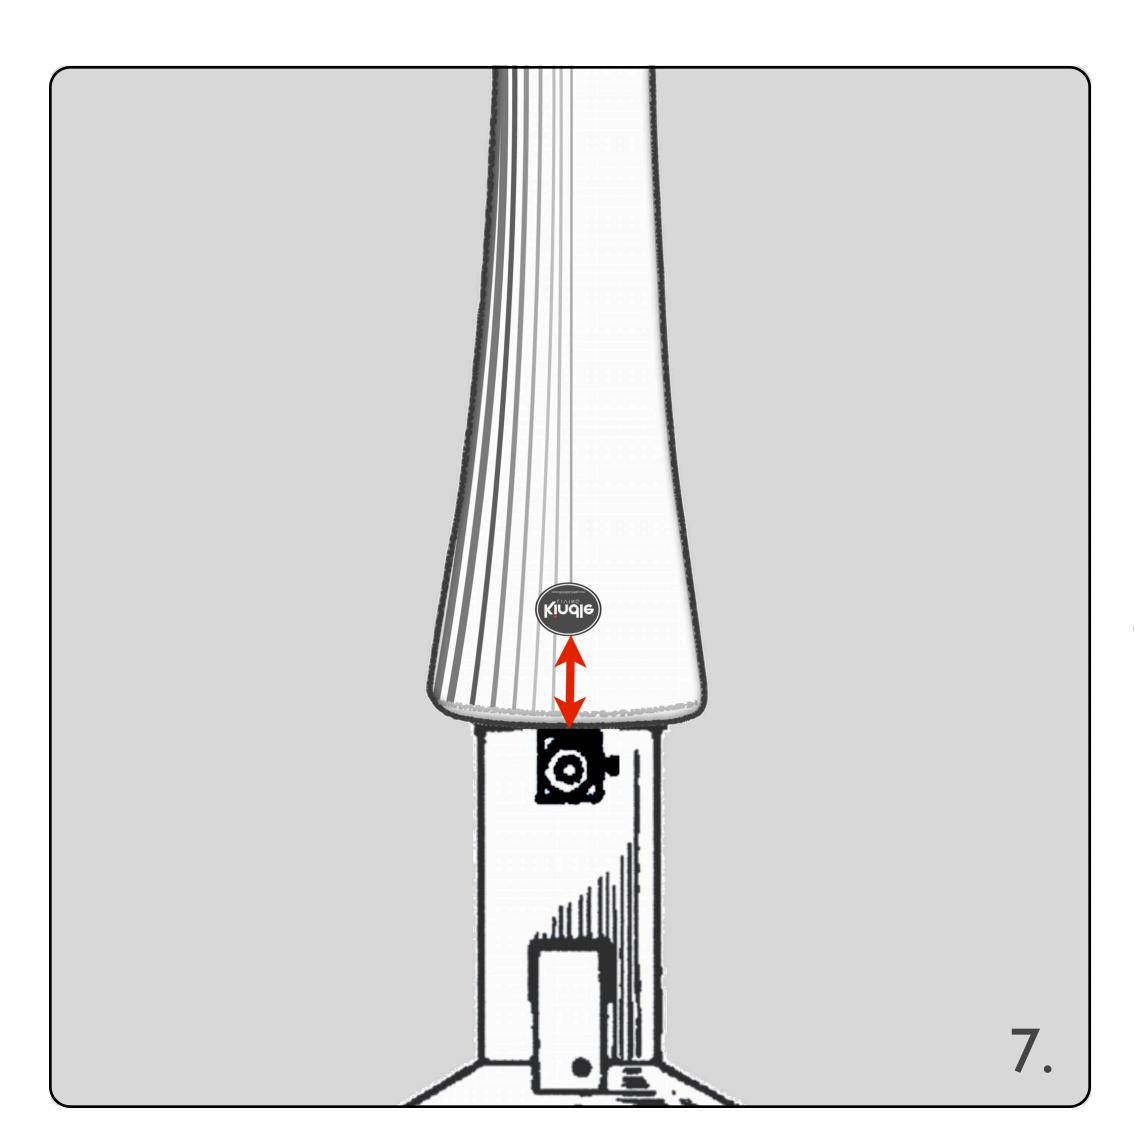

7. Align the Kindle logo with the control knob.


8. Attach hose clamp to the bottom trim of neck. Fasten tightly to prevent neck from sliding down the post.

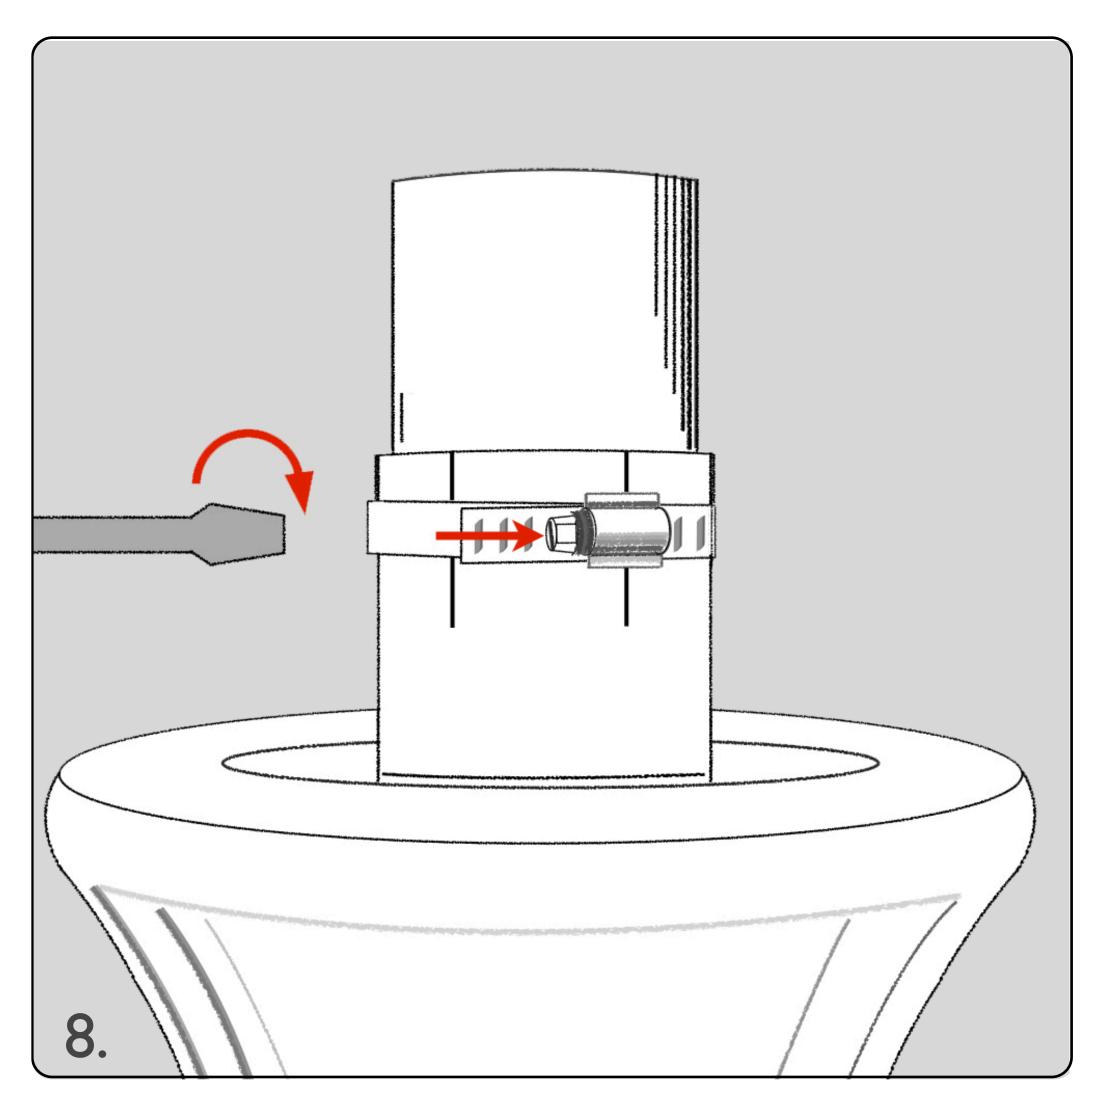


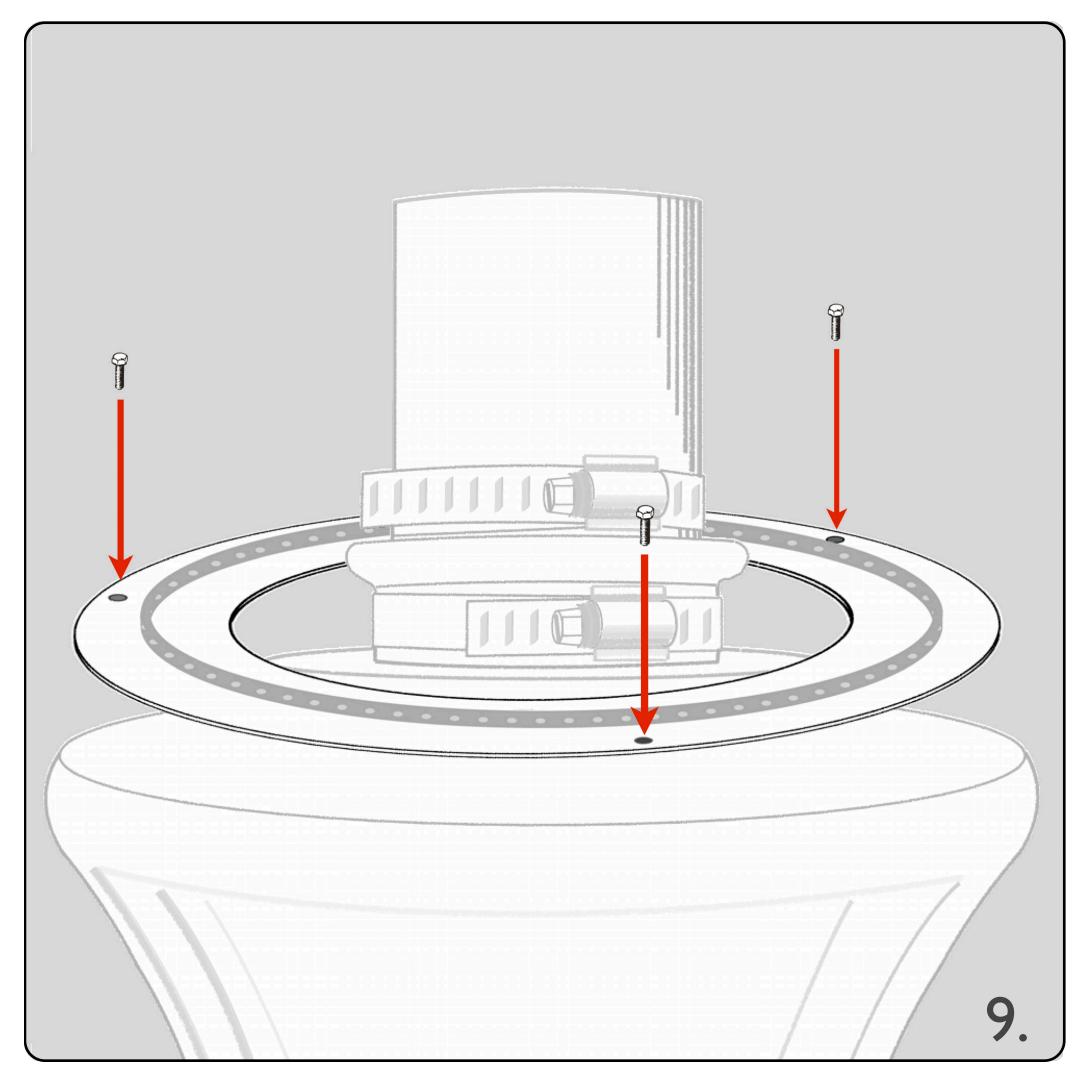

9. Attach optional light ring to the base of the Kindle neck using the 3 small self-tapping screws. Be careful not to over-tighten.


10. Place the Kindle base cover over the weighted base, then slide the neck assembly into the base socket. If the optional light ring is installed, be careful not to damage it during this step.

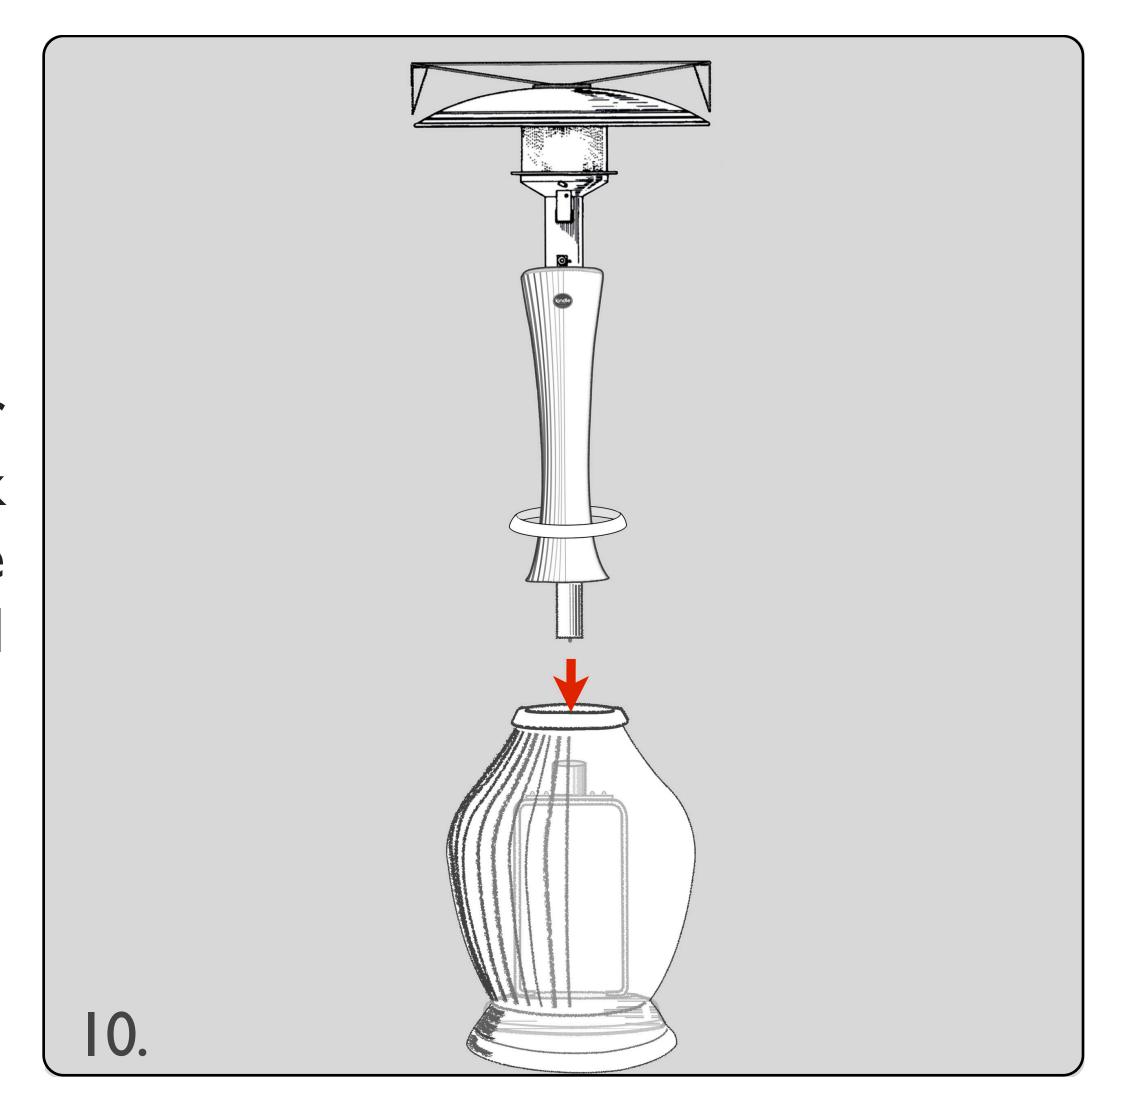


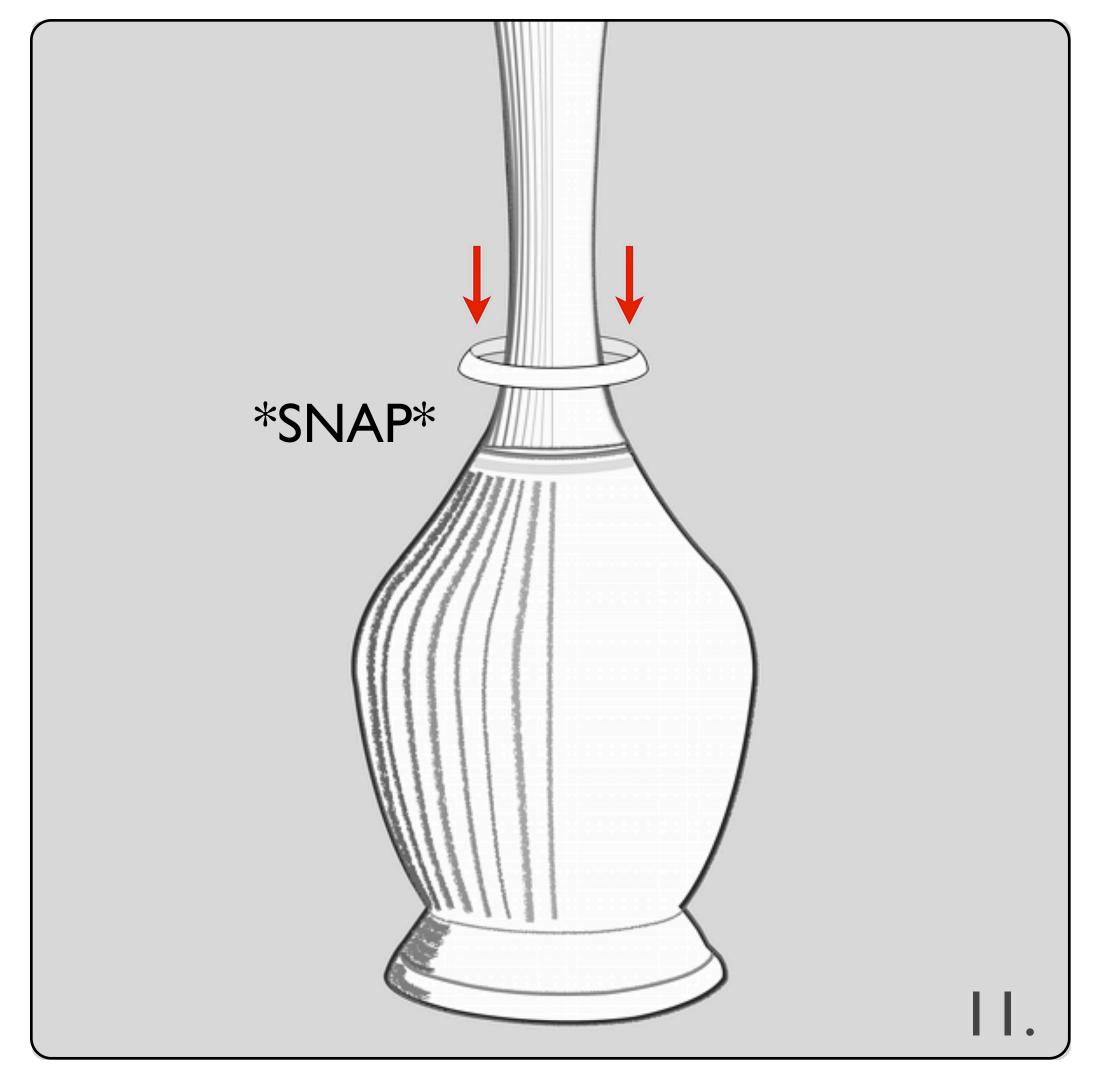

11. Snap the trim ring (or optional cocktail table) over the top portion of the Kindle base cover.


12. With the help of a friend, lean the Kindle to one side and gently place the shade on top of the heater so that it rests on the shade bracket. Please take care not to damage the Firewall.

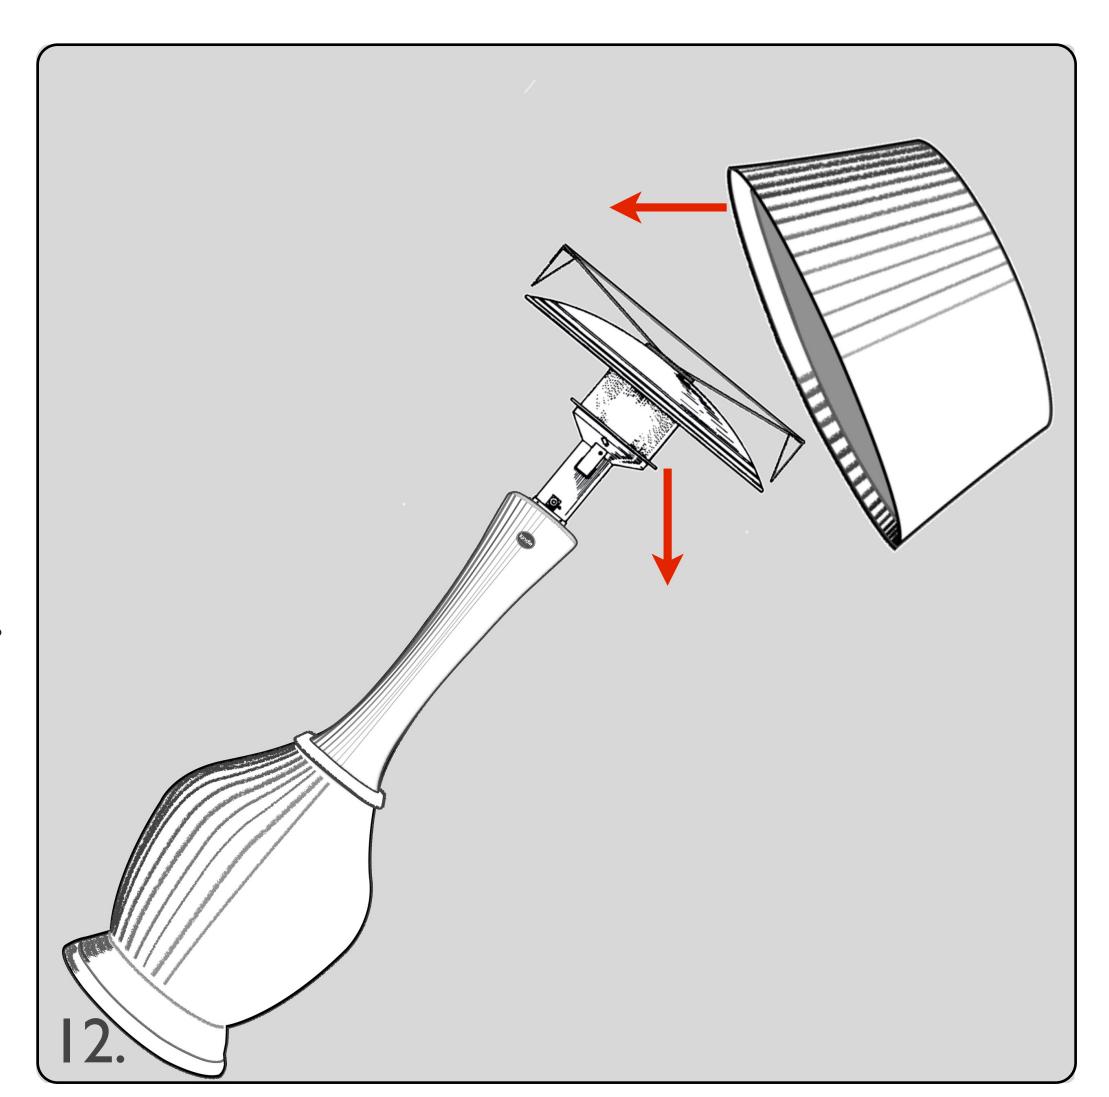


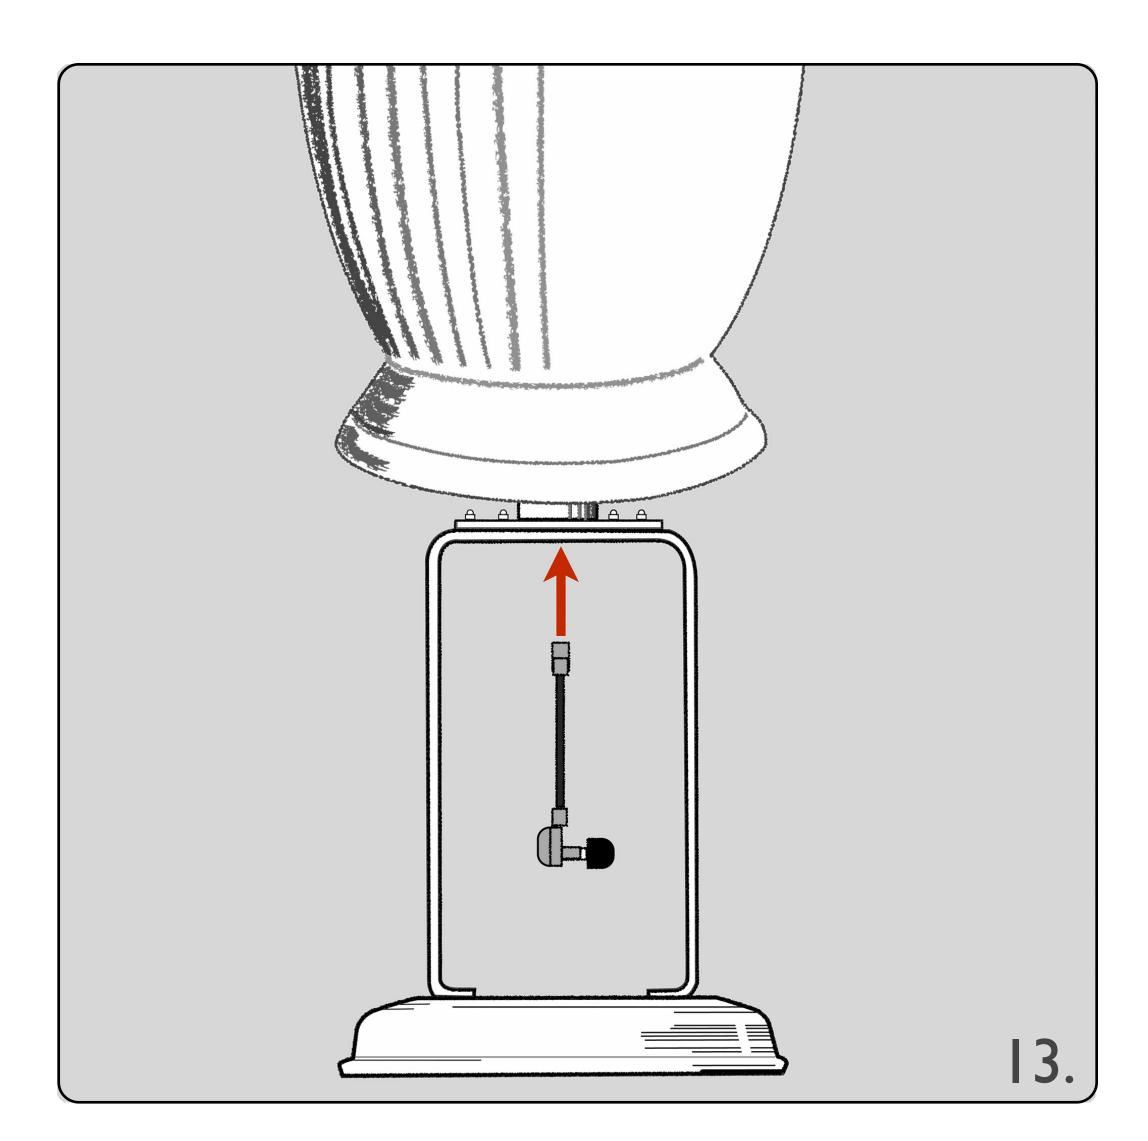

13. Lift the Kindle base cover, rest it on the support bracket and attach the regulator to the gas pipe.

14. Place the propane tank inside the Kindle base cover on top of the weighted base.

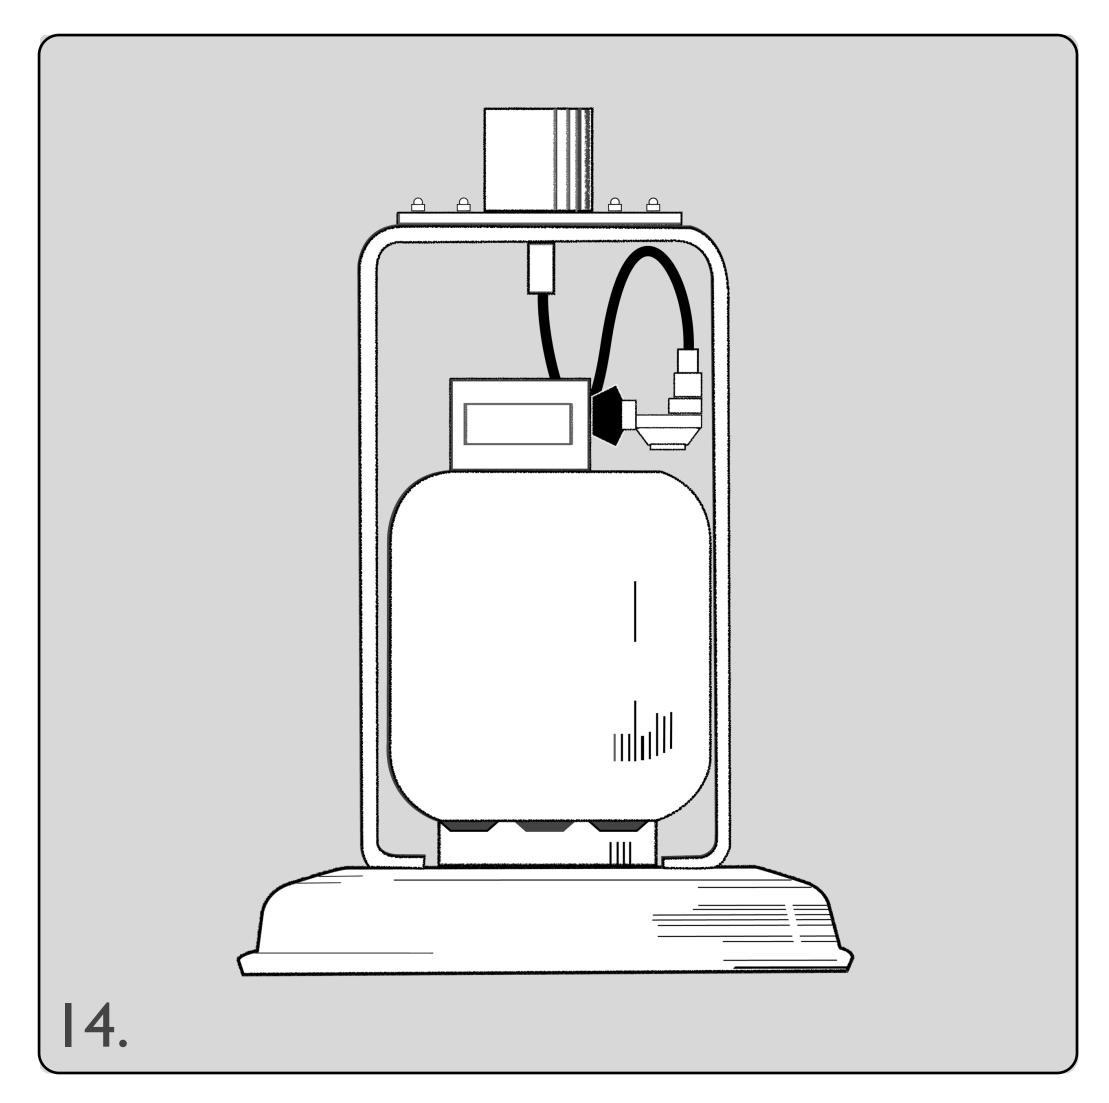


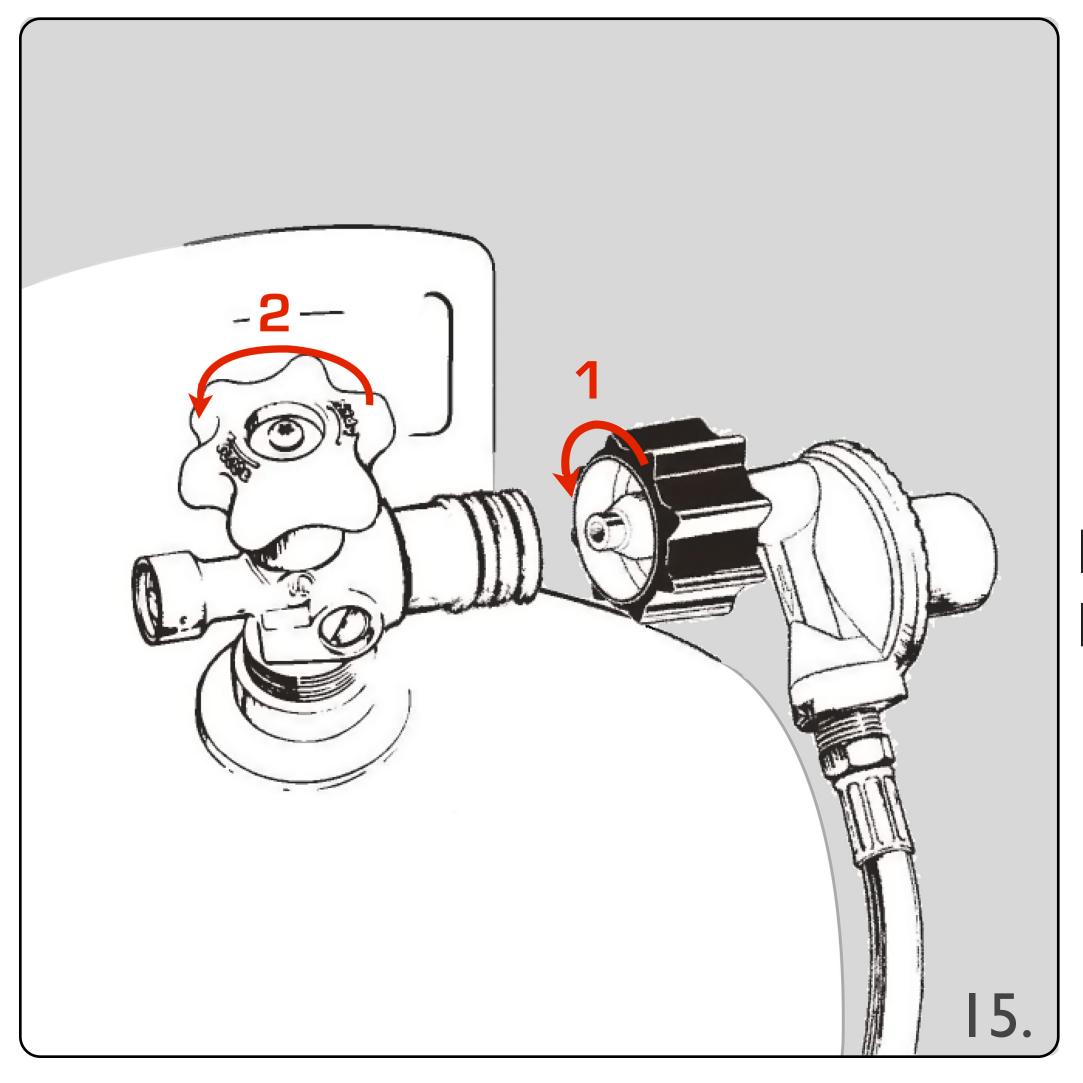


15. Attach the regulator to the propane tank. Open the valve on the propane tank.


- 16. To ignite the Kindle heater:
- a. Turn the control knob to 'PILOT'.
- b. Push the knob in and hold for 30 seconds.*
- c. While holding down the knob, press and hold the red ignitor button until the pilot flame ignites.
- d. After the pilot ignites, continue to hold the knob in for 30 seconds.
- e. Release the knob and pilot should stay lit.
- f. Turn control knob to 'ON' to start heater.

*When using a brand new tank this may take up to two minutes to purge the gas line of air.

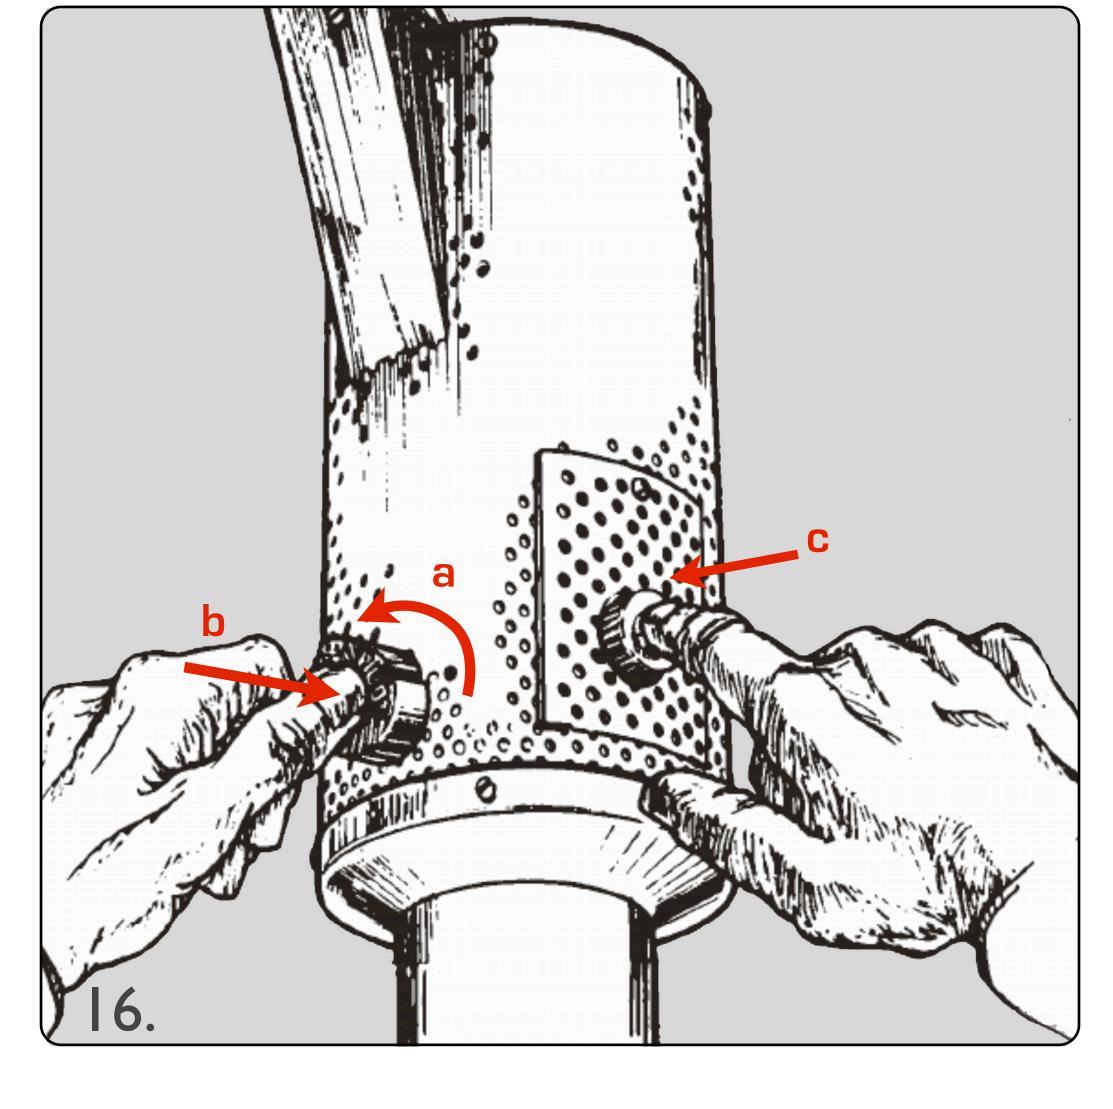

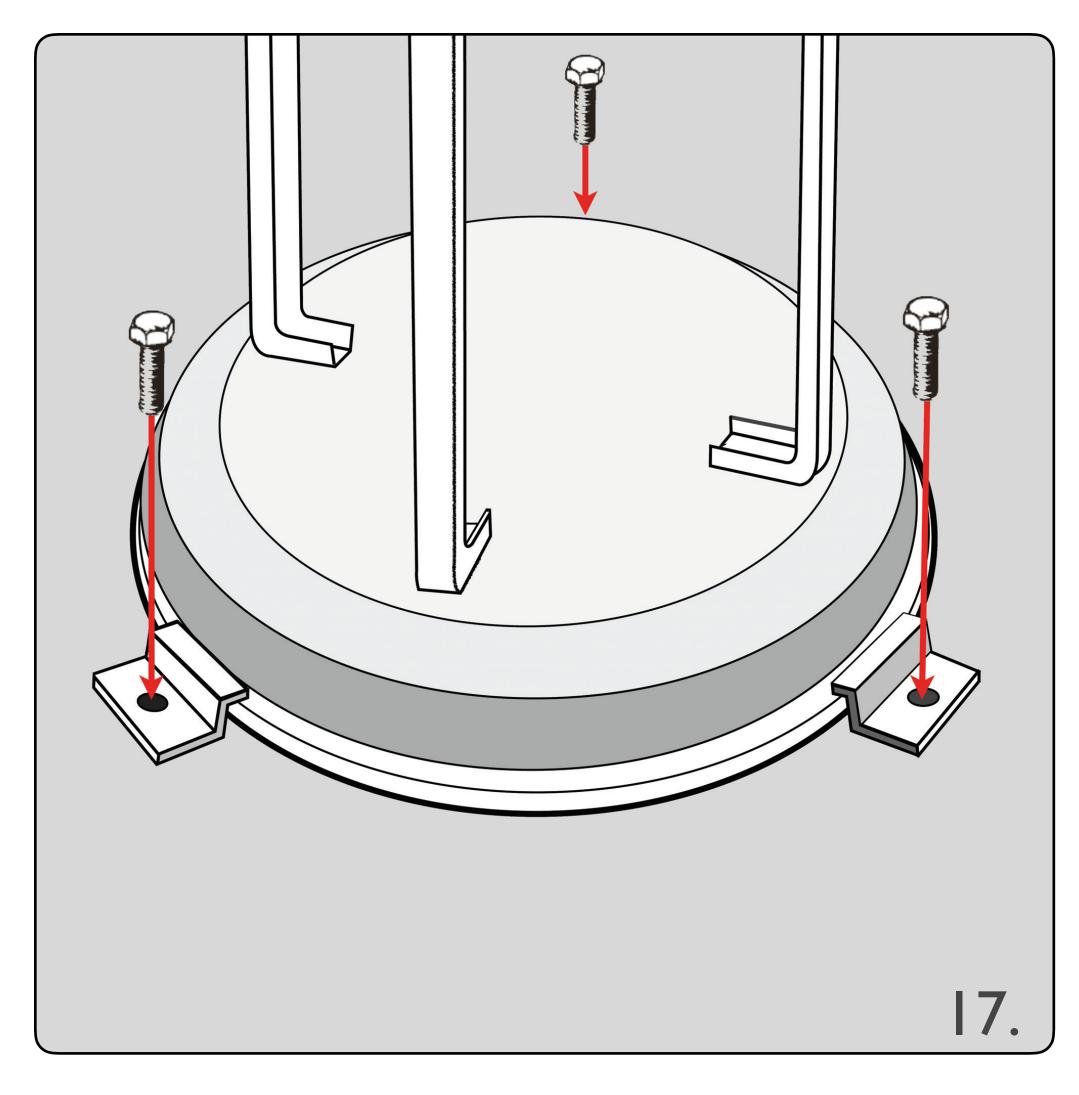

17. To provide extra stability to protect against wind gusts, the use of the enclosed floor clamps is advised. (US models only)

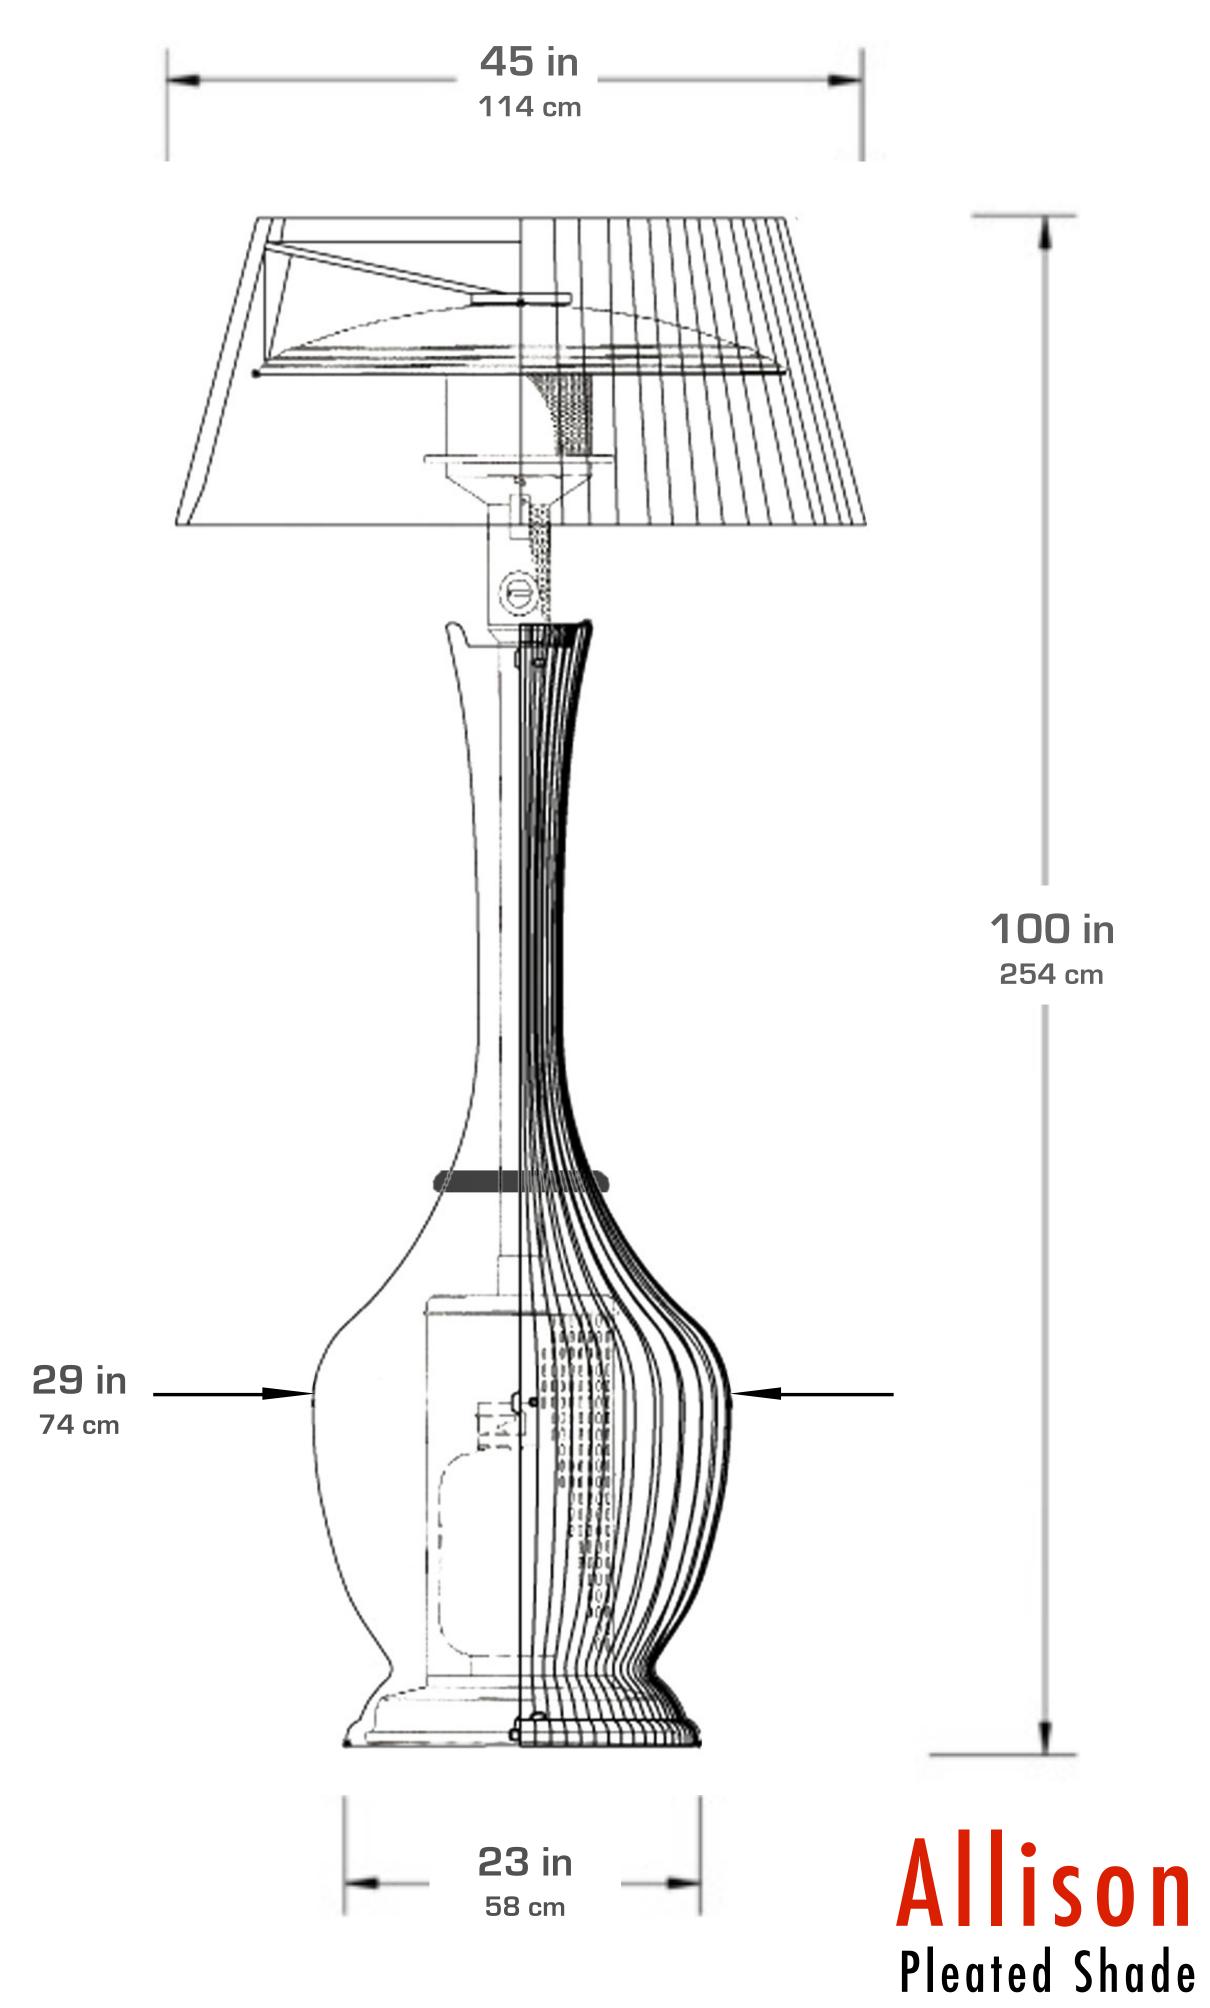


Box 1: 50"x46"x30" 127x117x76cm

kindle weight: 150 lb 68 kg

Box 2: 28"x28"x37" 71x71x94cm ship weight: 210 lb 95 kg



Measurements are approximate and subject to change without notice.

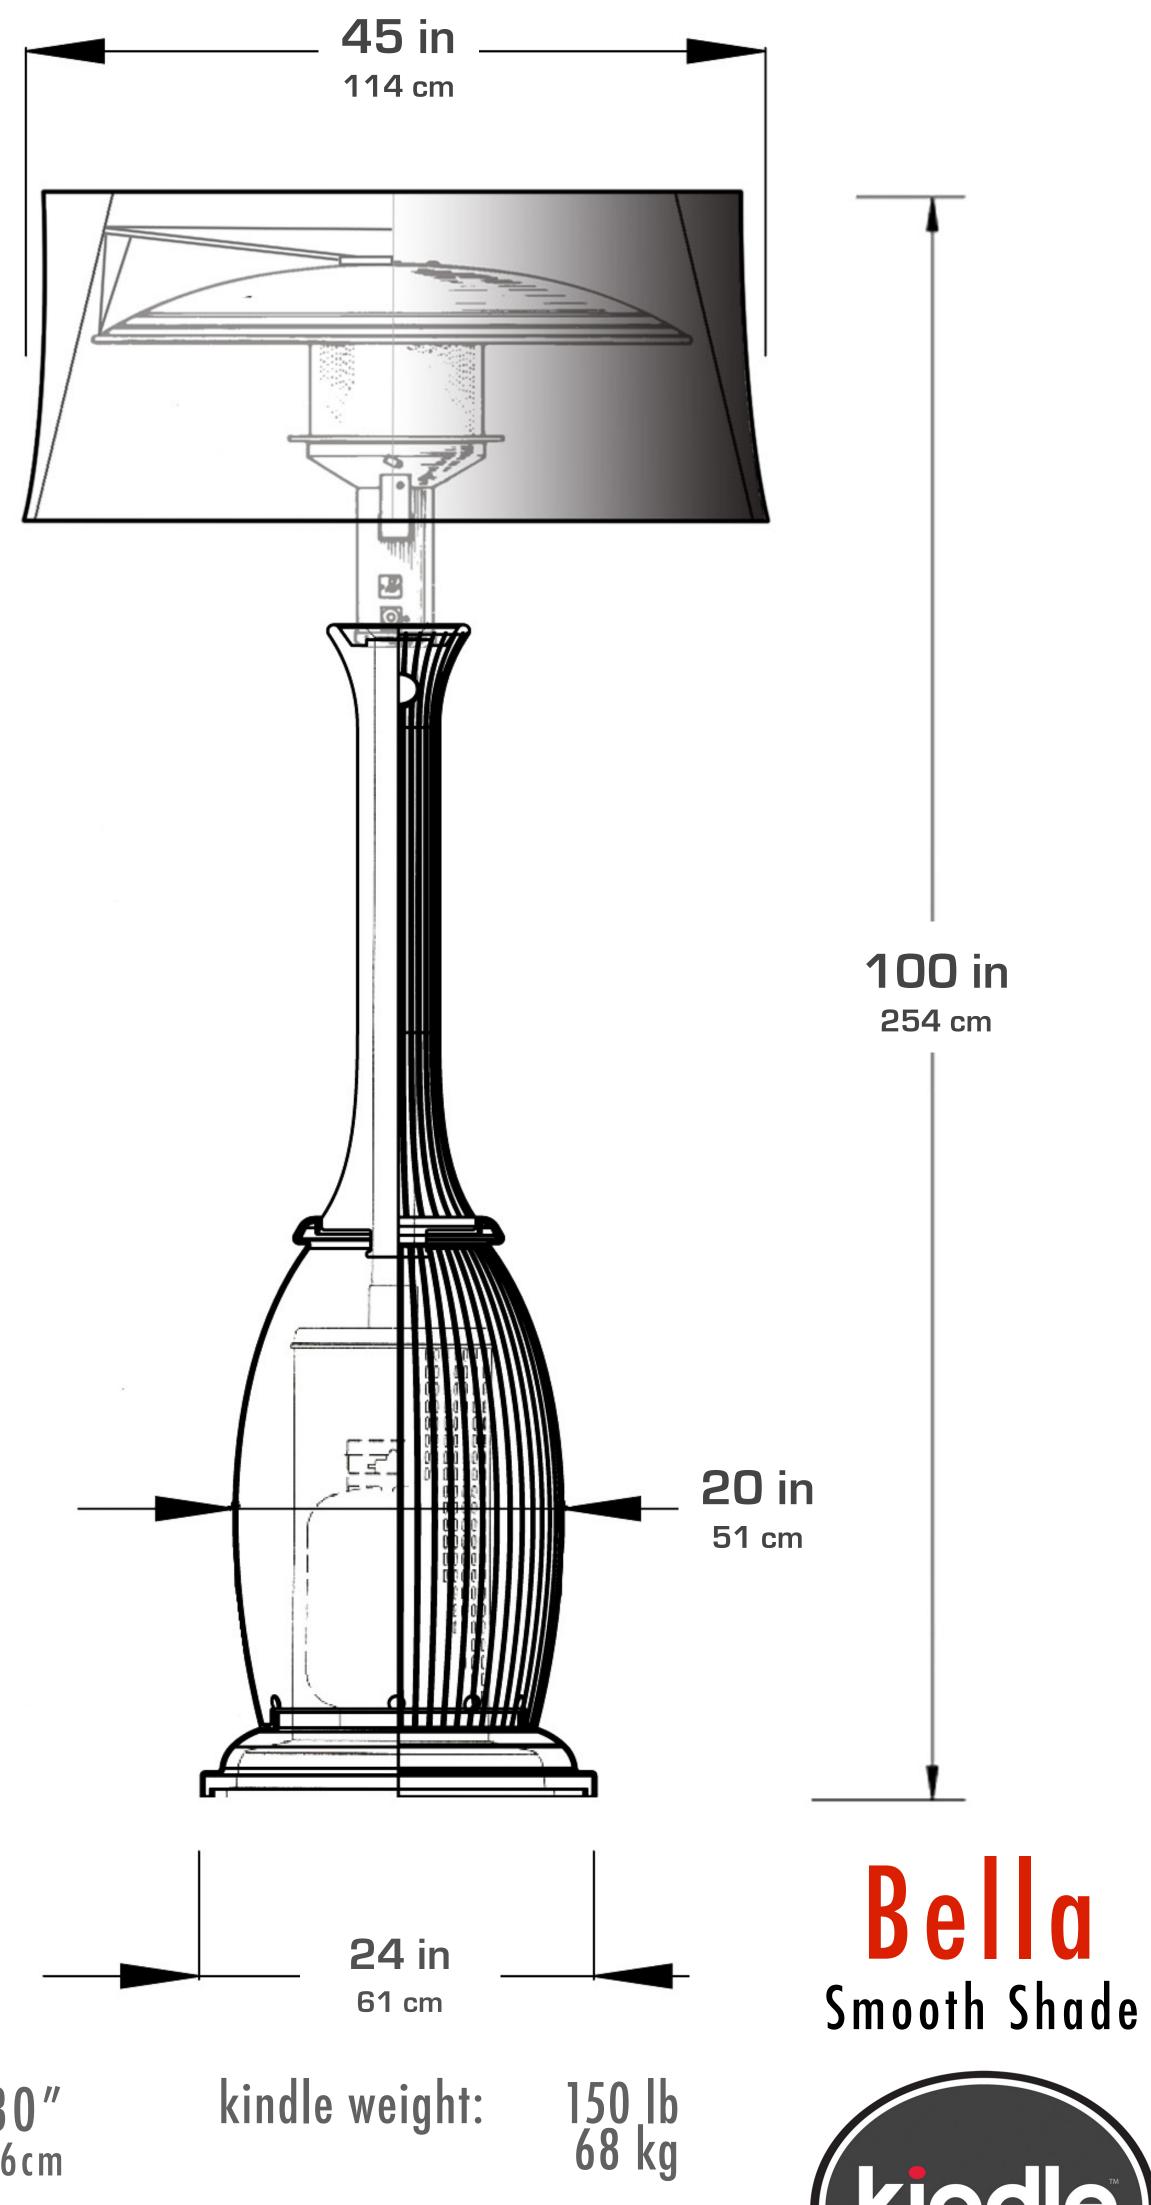

Box 1: 50"x46"x30"

127x117x76cm

Box 2: 25"x25"x36" 64x64x91cm

210 lb 95 kg ship weight:



Measurements are approximate and subject to change without notice.

Cleaning & Maintenance:

Body & Shade (Outside) – The Kindle body and shade are both made of composite resins that are inherently scratch, chemical, UV and fade resistant. All surfaces—except for Firewall—should be regularly washed clean with soapy water using a rag or sponge (avoid abrasive pads) and towel dried. A light multipurpose non-abrasive cleaner (i.e. "Simple Green or Pine Sol") works well.

Shade (Inside) – the flannel like dark grey material you see on the inside of the shade is a technical patented material called "Firewall." This material has been designed to reflect heat and care must be taken in the cleaning process. Firewall material may be dusted to remove dirt, but do not scrub, brush, or use excessive moisture or abrasion in cleaning this material. If a tear occurs please contact Kindle Living at (310) 400-3024 for a replacement shade.

Your Kindle should be kept clean, periodically inspected for unusual wear and tear, and hardware should be re-tightened if necessary.

Limited Warranty

Kindle Living products are warranted to be free of manufacturing defects for a period of 1 year from the date of purchase except for accessory lights, or other electronic products, which are warranted for 90-days. Warranty is limited to factory repair or replacement of parts at company's sole discretion, and excludes all packing and freight charges. Warranty expressly excludes damage caused through neglect in the use of the product—such as failing to take precautionary measures during windy conditions—or for non-intended use. Please contact Kindle Living with any questions pertaining to the terms of this limited warranty, replacement parts, repairs, maintenance or use.

Please note that Kindle Living is not the manufacturer of the heaters themselves, only the decorative covers. Heaters carry their own, separate, manufacturer's limited warranty which, if needed, will be fulfilled directly by the heater manufacturer. Please refer to the Sunglo heater instructions for additional information.





www.kindleliving.com

MARNING: California Proposition 65

IF NOT INSTALLED, OPERATED AND MAINTAINED IN ACCORDANCE WITH THE MANUFACTURER'S INSTRUCTIONS, THIS PRODUCT CAN EXPOSE YOU TO SUBSTANCES IN THE FUEL OR FROM COMBUSTION INCLUDING CARBON MONOXIDE WHICH CAN CAUSE DEATH OR SERIOUS ILLNESS AND WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS OR REPRODUCTIVE HARM. For more information go to www.P65WARNINGS.CA.GOV

P/N 60021

310.400.3024

info@kindleliving.com Handmade in Los Angeles

© 2019 Kindle Living www.KindleLiving.com/patents